

Dynamic Stream Adaptation - Audio Stream Control Service

Bluetooth® Change Request (CR)

- **Version:** CRr00_PR
- **Version Date:** 2026-07-10
- **Prepared By:** Generic Audio Working Group

This document is a working draft of a potential Bluetooth specification. It is subject to change and Bluetooth SIG is not required to finalize or adopt it. Although the Bluetooth SIG Board of Directors has decided to publicly release this working draft, other draft specifications, including prior or subsequent versions of this document, are Bluetooth SIG Confidential Information, unless they have been approved for public release by the Bluetooth SIG Board of Directors. Bluetooth SIG Members must comply with the Bluetooth SIG Confidentiality Policy and not disclose any document that is Bluetooth SIG confidential to anyone that is not a member of the Bluetooth SIG.

Abstract:

This service exposes an interface for Audio Stream Endpoints (ASEs), which enables clients to discover, configure, establish, and control the ASEs and their associated unicast Audio Streams.

Use of this specification is your acknowledgement that you agree to and will comply with the following notices and disclaimers. You are advised to seek appropriate legal, engineering, and other professional advice regarding the use, interpretation, and effect of this specification.

Use of Bluetooth specifications by members of Bluetooth SIG is governed by the membership and other related agreements between Bluetooth SIG and its members, including those agreements posted on Bluetooth SIG's website located at www.bluetooth.com. Any use of this specification by a member that is not in compliance with the applicable membership and other related agreements is prohibited and, among other things, may result in (i) termination of the applicable agreements and (ii) liability for infringement of the intellectual property rights of Bluetooth SIG and its members. This specification may provide options, because, for example, some products do not implement every portion of the specification. All content within the specification, including notes, appendices, figures, tables, message sequence charts, examples, sample data, and each option identified is intended to be within the bounds of the Scope as defined in the Bluetooth Patent/Copyright License Agreement ("PCLA"). Also, the identification of options for implementing a portion of the specification is intended to provide design flexibility without establishing, for purposes of the PCLA, that any of these options is a "technically reasonable non-infringing alternative."

Use of this specification by anyone who is not a member of Bluetooth SIG is prohibited and is an infringement of the intellectual property rights of Bluetooth SIG and its members. The furnishing of this specification does not grant any license to any intellectual property of Bluetooth SIG or its members. **THIS SPECIFICATION IS PROVIDED "AS IS" AND BLUETOOTH SIG, ITS MEMBERS AND THEIR AFFILIATES MAKE NO REPRESENTATIONS OR WARRANTIES AND DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY, TITLE, NON-INFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, OR THAT THE CONTENT OF THIS SPECIFICATION IS FREE OF ERRORS.** For the avoidance of doubt, Bluetooth SIG has not made any search or investigation as to third parties that may claim rights in or to any specifications or any intellectual property that may be required to implement any specifications and it disclaims any obligation or duty to do so.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, BLUETOOTH SIG, ITS MEMBERS AND THEIR AFFILIATES DISCLAIM ALL LIABILITY ARISING OUT OF OR RELATING TO USE OF THIS SPECIFICATION AND ANY INFORMATION CONTAINED IN THIS SPECIFICATION, INCLUDING LOST REVENUE, PROFITS, DATA OR PROGRAMS, OR BUSINESS INTERRUPTION, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, AND EVEN IF BLUETOOTH SIG, ITS MEMBERS OR THEIR AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF THE DAMAGES.

Products equipped with Bluetooth wireless technology ("Bluetooth Products") and their combination, operation, use, implementation, and distribution may be subject to regulatory controls under the laws and regulations of numerous countries that regulate products that use wireless non-licensed spectrum. Examples include airline regulations, telecommunications regulations, technology transfer controls, and health and safety regulations. You are solely responsible for complying with all applicable laws and regulations and for obtaining any and all required authorizations, permits, or licenses in connection with your use of this specification and development, manufacture, and distribution of Bluetooth Products. Nothing in this specification provides any information or assistance in connection with complying with applicable laws or regulations or obtaining required authorizations, permits, or licenses.

Bluetooth SIG is not required to adopt any specification or portion thereof. If this specification is not the final version adopted by Bluetooth SIG's Board of Directors, it may not be adopted. Any specification adopted by Bluetooth SIG's Board of Directors may be withdrawn, replaced, or modified at any time. Bluetooth SIG reserves the right to change or alter final specifications in accordance with its membership and operating agreements.

Copyright © 2017–2026. All copyrights in the Bluetooth Specifications themselves are owned by Apple Inc., Ericsson AB, Intel Corporation, Google LLC, Lenovo (Singapore) Pte. Ltd., Microsoft Corporation, Nokia Corporation, and Toshiba Corporation. The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. Other third-party brands and names are the property of their respective owners.

Contents

1	Introduction.....	5
1.1	Language	5
1.1.1	Language conventions	5
1.1.2	Reserved for Future Use	6
1.1.3	Prohibited	6
1.2	Requirements in tables.....	6
1.2.1	Table requirements for unused cells	7
1.3	Conformance.....	7
1.4	Byte transmission order.....	7
1.5	Service dependencies	7
1.6	Bluetooth Core Specification release compatibility.....	7
1.7	GATT sub-procedure requirements	7
1.8	Transport dependencies.....	8
1.9	Application error codes	8
1.10	Terminology	8
2	Service	11
2.1	Declaration	11
2.2	Behavior	11
3	ASE state management	13
3.1	States	14
3.2	ASE state machine transitions	15
4	Service characteristics	18
4.1	Audio Stream Endpoints	18
4.1.1	ASE behavior	25
4.2	ASE Control Point.....	25
4.2.1	ASE Control Point behavior	28
4.3	ASCS Features.....	28
4.3.1	ASCS Features behavior	28
5	ASE Control operations	30
5.1	Config Codec operation.....	32

5.2	Config QoS operation	34
5.3	Enable operation.....	36
5.4	Receiver Start Ready operation	37
5.5	Disable operation.....	37
5.6	Receiver Stop Ready operation	38
5.7	Update Metadata operation	39
5.8	Release operation	40
5.9	Released operation	40
5.10	Fast Enable operation.....	41
6	SDP interoperability	46
7	Acronyms and abbreviations	47
8	References	48

1 Introduction

1.1 Language

1.1.1 Language conventions

In the development of a specification, the Bluetooth SIG has established the following conventions for use of the terms “*shall*”, “*mandatory*”, “*shall not*”, “*should*”, “*should not*”, “*may*”, “*optional*”, “*must*”, and “*can*”. In this Bluetooth specification, the terms in [Table 1.1](#) have the specific meanings given in that table, irrespective of other meanings that exist.

Term	Definition
shall or mandatory	—used to express what is required by the specification and is to be implemented exactly as written without deviation
shall not	—used to express what is forbidden by the specification
should or may or optional	—not mandatory. Used to express either: what is recommended by the specification without forbidding anything (“ <i>should</i> ”) what is permissible within the limits of the specification (“ <i>may</i> ” or “ <i>optional</i> ”)
should not	—used to indicate that something is discouraged but not forbidden by the specification
must	—used to indicate either: an indisputable statement of fact that is always true regardless of the circumstances an implication or natural consequence if a separately-stated requirement is followed
can	—used to express a statement of possibility or capability

Table 1.1: Language conventions terms and definitions

Where more than one item is permitted but not required, the choices to include or support those items are independent from one another unless the specification explicitly states otherwise. Each item that is implemented shall be implemented exactly as written without deviation.

1.1.1.1 Implementation alternatives

When specification content indicates that there are multiple alternatives to satisfy specification requirements, if one alternative is explained or illustrated in an example it is not intended to limit other alternatives that the specification requirements permit.

1.1.1.2 Discrepancies

It is the goal of Bluetooth SIG that specifications are clear, unambiguous, and do not contain discrepancies. However, members can report any perceived discrepancy by filing an erratum and can request a test case waiver as appropriate.

1.1.2 Reserved for Future Use

Where a field in a packet, Protocol Data Unit (PDU), or other data structure is described as "Reserved for Future Use" (irrespective of whether in uppercase or lowercase), the device creating the structure shall set its value to zero unless otherwise specified. Any device receiving or interpreting the structure shall ignore that field; in particular, it shall not reject the structure because of the value of the field.

Where a field, parameter, or other variable object can take a range of values, and some values are described as "Reserved for Future Use," a device sending the object shall not set the object to those values. A device receiving an object with such a value should reject it, and any data structure containing it, as being erroneous; however, this does not apply in a context where the object is described as being ignored or it is specified to ignore unrecognized values.

When a field value is a bit field, unassigned bits can be marked as Reserved for Future Use and shall be set to 0. Implementations that receive a message that contains a Reserved for Future Use bit that is set to 1 shall process the message as if that bit was set to 0, except where specified otherwise.

The acronym RFU is equivalent to Reserved for Future Use.

1.1.3 Prohibited

When a field value is an enumeration, unassigned values can be marked as "Prohibited." These values shall never be used by an implementation, and any message received that includes a Prohibited value shall be ignored and shall not be processed and shall not be responded to.

Where a field, parameter, or other variable object can take a range of values, and some values are described as "Prohibited," devices shall not set the object to any of those Prohibited values. A device receiving an object with such a value should reject it, and any data structure containing it, as being erroneous.

"Prohibited" is never abbreviated.

1.2 Requirements in tables

Requirements in this specification are defined as "Mandatory" (M), "Optional" (O), "Excluded" (E), "Not Applicable" (N/A), or "Conditional" (C.#). Conditional statements (C.#) are listed directly below the table in which they appear.

- "M" for mandatory. See [Table 1.1: Language conventions terms and definitions](#).
- "O" for optional. See [Table 1.1](#) Language conventions terms and definitions.
- "E" for excluded. "Excluded" means not permitted in this context; cannot be supported or included for this purpose. The item can still be supported or included if allowed for some other purpose (e.g., a feature can be mandatory for one role and excluded for another; a device that supports both roles must support this feature).

- “C.#” for conditional. “Conditional” means that an item is required, optional, or prohibited based on whether one or more other items are supported or included (# represents any number). Within the definition of the condition, if those other items mean that “not permitted” applies, it has the same meaning as “E”.

1.2.1 Table requirements for unused cells

An unused cell is a table cell without a value or content, which is indicated with either the word “none” (without quotation marks) or a hyphen (i.e., a “minus” sign).

To use an additional form of notation in this specification’s tables—such as an ellipsis (...) to indicate a gap in a series of values—add an explanation of that notation in the specification’s section on table conventions for requirements and unused cells. If a particular table uses a notation that differs from the initially expressed table conventions for unused cells, explain this additional notation in the introduction of the table to which it applies.

1.3 Conformance

Each capability of this specification shall be supported in the specified manner. This specification may provide options for design flexibility, because, for example, some products do not implement every portion of the specification. For each implementation option that is supported, it shall be supported as specified.

1.4 Byte transmission order

All characteristics used with this service shall be transmitted with the least significant octet (LSO) first (i.e., little endian). Where the format is described in tables in this document, the LSO is the first octet in the topmost field of the table; the most significant octet (MSO) is the last octet in the bottommost field of the table. Where characteristics are defined in the GATT Specification Supplement (GSS), see GSS Section 2.2 [1] for more information on octet ordering.

1.5 Service dependencies

This service requires the Generic Attribute Profile (GATT) described in [1] and the Published Audio Capabilities Service (PACS) [4].

1.6 Bluetooth Core Specification release compatibility

This service is compatible with Bluetooth Core Specification, Version 5.2 [1] or later.

1.7 GATT sub-procedure requirements

Requirements in this section represent a minimum set of requirements for a server. Other GATT sub-procedures may be used if supported by both the client and server.

Table 1.2 summarizes additional GATT sub-procedure requirements beyond those required by all GATT servers on Unenhanced Attribute Protocol (ATT) bearers.

GATT Sub-Procedure	Requirements
Write Characteristic Value	M
Write Without Response	M
Notifications	M
Read Characteristic Descriptors	M
Write Characteristic Descriptors	M
Write Long Characteristic Value	M

Table 1.2: Additional GATT sub-procedure requirements on Unenhanced ATT bearers

If the server supports characteristic values larger than the minimum ATT_MTU for the Unenhanced ATT bearer, then the server should support the Read Long Characteristic Values GATT sub-procedure if not already required by the Bluetooth Core Specification [1].

1.8 Transport dependencies

This specification does not impose any transport requirements. If reliability of Notifications is required (See Volume 3, Part F, Section 3.3.2 in [1], higher layers can require Enhanced ATT bearer support.

1.9 Application error codes

This service does not define any ATT Application Error codes.

1.10 Terminology

Table 1.3 defines terms that are needed to understand features used in this specification. This specification also uses terms that are defined in the Basic Audio Profile (BAP) [3], PACS [4], and Bluetooth Core Specification [1].

Term	Definition
Audio Channel	Defined in [3]
Audio Sink	Defined in [3]
Audio Source	Defined in [3]
Audio Stream Endpoint (ASE)	The endpoint of a unicast Audio Stream, which audio data flows to or from; exists on the server
ASE state machine	Used to configure, control, and monitor the status of an ASE (see Section 3); exists on the server

Term	Definition
ASE identifier	The identifier of an ASE; exposed by the server in ASE characteristics; denoted with the value, “ASE_ID”
Connected Isochronous Group (CIG)	Defined in Volume 6, Part B, Section 4.5.14 in [1]
CIG Identifier	Defined in Volume 6, Part B, Section 4.5.14 in [1]; denoted with the parameter, “CIG_ID”
Connected Isochronous Stream (CIS)	Defined in Volume 6, Part B, Section 4.5.13 in [1]
CIS Identifier	Defined in Volume 6, Part B, Section 4.5.13.1 in [1]; denoted with the parameter, “CIS_ID”
EATT	An ATT bearer feature introduced in Volume 3, Part F, Section 3.2.11 in [1]
Enhanced ATT bearer	An ATT bearer using the Enhanced Credit Based Flow Control Logical Link Control and Adaptation Protocol (L2CAP) channel mode introduced in Volume 3, Part A, Section 10.2 in [1]
Generic Access Profile (GAP)	Defined in Volume 3, Part C in [1]
Quality of Service (QoS)	A unicast Audio Stream includes a configuration preference for a CIS, known as QoS. QoS configuration is performed with respect to an ASE using high-level parameters that describe a certain level of user experience (see Section 5.2). QoS configuration is a recommendation from the client host to the server host; the client controller determines the QoS parameter values applied to a CIS.
Metadata	Defined in [3]
PAC record	Defined in [4]
Presentation Delay	Defined in [3]
Reliability	Defined in Volume 3, Part F, Section 3.3.2 in [1]
Sink ASE	An ASE where the server acts as Audio Sink. Audio data flows to the Sink ASE.
Source ASE	An ASE where the server acts as Audio Source. Audio data flows from the Source ASE.

Term	Definition
Unenhanced ATT bearer	An ATT bearer not using the Enhanced Credit Based Flow Control L2CAP channel mode introduced in Volume 3, Part A, Section 10.2 in [1]
Unicast Audio Stream	Defined in [3]

Table 1.3: Terminology

2 Service

2.1 Declaration

There shall be no more than one Audio Stream Control Service (ASCS) instance on a server.

ASCS shall be a «Primary Service» and the service universally unique identifier (UUID) shall be set to «Audio Stream Control» as defined in [2].

2.2 Behavior

ASCS can be instantiated on devices that can accept the establishment of unicast Audio Streams. Examples of such devices are speakers, headsets, hearing aids, earbuds, and wireless microphones.

There are three types of characteristics used in ASCS:

- Two types of ASE characteristics that are distinguished by the characteristic UUID: The Sink ASE characteristic and the Source ASE characteristic.
 - In this specification, the term ASE characteristic is used to refer to both the Sink ASE characteristic and the Source ASE characteristic wherever they can be used interchangeably (that is, if the description and/or behavior applies to both types of characteristics); otherwise, the characteristics are mentioned by name.
 - An ASE characteristic is used to expose the state of an individual ASE on the server to a client and any applied configuration parameters or Metadata for that ASE.
 - Sink ASE characteristics represent Sink ASEs, to which audio data can flow. The server is said to act as Audio Sink for that ASE. There can be more than one Sink ASE characteristic on the server.
 - Source ASE characteristics represent Source ASEs, from which audio data can flow. The server is said to act as Audio Source for that ASE. There can be more than one Source ASE characteristic on the server.
- An ASE Control Point characteristic that clients use to configure audio codec parameters, CIS configuration parameters, and Metadata for each ASE exposed by the server.
 - The ASE Control Point characteristic is used to operate on all ASEs, distinguishing each ASE by its ASE_ID value (see Table 1.3).

The ASCS UUID should be included in the Service Data Advertising Data (AD) data type in advertising data transported using connectable extended advertising packets transmitted by servers supporting this specification to assist clients scanning for such devices. Higher-layer specifications can define additional service data (see Core Specification Supplement (CSS) [5]) to be included in the Service Data AD data type used in advertising data.

For all characteristics defined in this specification, arrayed parameters are specified using the following notation: ParameterA[i]. If more than one set of arrayed parameters are specified (e.g., ParameterA[i], ParameterB[i]), then, the order of the parameters are as follows (unless noted otherwise):

ParameterA[0], ParameterB[0], ParameterA[1], ParameterB[1], ParameterA[2], ParameterB[2],
...ParameterA[n], ParameterB[n].

3 ASE state management

Configuration, control, and status of an ASE is described in terms of an ASE state machine.

The state of an ASE is maintained by the server and is shared with a client using ASE characteristics.

Each ASE has its own instance of the ASE state machine on the server. The ASE state machine can be controlled by a client by writing to the ASE Control Point characteristic or, in some instances, autonomously controlled by the server. Changes to the state and/or parameter values of an ASE can be tracked by a client by observing changes to the ASE characteristic value.

Figure 3.1 shows the Source ASE state machine and Figure 3.2 shows the Sink ASE state machine. The oval shapes represent the states of the ASE state machines. The labelled arrows represent ASE Control operations (see Section 5 for ASE Control operation definitions), which can cause a transition of the ASE state machine and/or change the parameter values of an ASE.

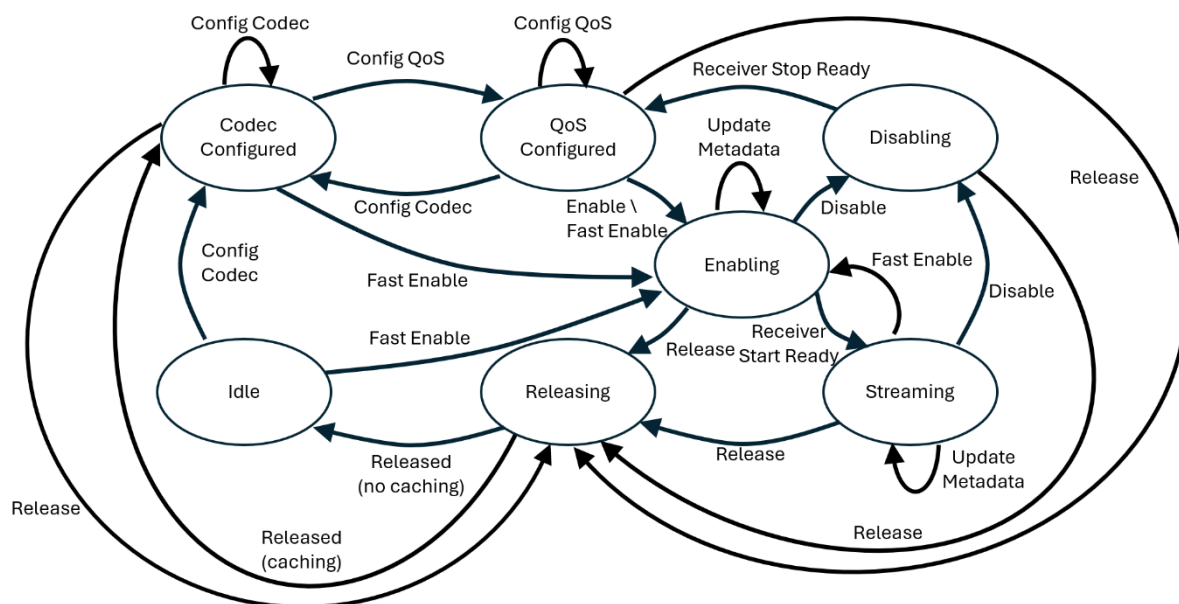


Figure 3.1: The Source ASE state machine

State	ASE_State Value	Description
Streaming	0x04	The ASE has a codec configuration and a QoS configuration applied, and any Metadata applied by the client or server is associated with the ASE. The ASE is coupled to a CIS. The device acting as Audio Sink has initiated a Receiver Start Ready operation that has successfully completed and the ASE is ready to receive or transmit audio data.
Disabling	0x05	Applies only to Source ASE. The ASE has a codec configuration and a QoS configuration applied. Any CIS established to transport audio data for the ASE might remain established or might be disconnected however the ASE is being decoupled from the CIS. Any Metadata previously applied remains associated with the ASE in this state. The ASE remains ready to transmit audio data until the device acting as Audio Sink has initiated a Receiver Stop Ready operation that has successfully completed.
Releasing	0x06	Any CIS established to transport audio data for the ASE is being disconnected or has been disconnected. Any previously applied codec configuration may be cached by the server, or the server may cache a codec configuration of the server's choosing, or the codec configuration may be removed. Any previously applied QoS configuration is no longer valid. Any Metadata previously applied is no longer associated with the ASE.
–	All other values	RFU

Table 3.1: ASE states

3.2 ASE state machine transitions

Table 3.2 shows the permitted ASE state machine transitions for the Sink ASE and the Source ASE.

If the server detects link loss of a CIS for an ASE in the Streaming state or the Disabling state, the server shall immediately transition that ASE to the QoS Configured state. Link loss of a CIS for an ASE in any state other than Streaming or Disabling shall not cause a transition of the ASE state machine.

If the server detects link loss of a Bluetooth Low Energy-Asynchronous connection-oriented link (LE-ACL) for an ASE in any state, the server shall immediately transition that ASE to the Releasing state, and the server shall follow the requirements defined in Section 5.9.

If a transition is successful, the ASE state machine shall transition to the Next State, and all applicable parameters shall be updated to their new values.

If a transition is unsuccessful, the ASE state machine shall remain in the Current State, and all parameters previously applied in the Current State shall not change.

For example, if an ASE was in the Idle state and the server could not complete a Config Codec operation successfully, the ASE state machine would remain in the Idle state.

Except for the server detecting link loss of a CIS for an ASE in the Streaming state or the Disabling state and subsequently transitioning that ASE to the QoS Configured state, as mentioned earlier in this section, ASE state machine transitions that are not shown in [Table 3.2](#) are invalid transitions and shall not occur.

ASE Type	Current State	ASE Control Operation	Initiating Device	Next State
All	Idle	Config Codec	Client or server	Codec Configured
All	Idle	Fast Enable ¹	Client only	Enabling
All	Codec Configured	Config Codec	Client or server	Codec Configured
All	Codec Configured	Release	Client or server	Releasing
All	Codec Configured	Config QoS	Client only	QoS Configured
All	Codec Configured	Fast Enable ¹	Client only	Enabling
All	QoS Configured	Config Codec	Client or server	Codec Configured
All	QoS Configured	Config QoS	Client only	QoS Configured
All	QoS Configured	Release	Client or server	Releasing
All	QoS Configured	Enable	Client only	Enabling
All	QoS Configured	Fast Enable ¹	Client only	Enabling
All	Enabling	Release	Client or server	Releasing
All	Enabling	Update Metadata	Client or server	Enabling
Source ASE	Enabling	Disable	Client or server	Disabling
Sink ASE	Enabling	Disable	Client or server	QoS Configured
Source ASE	Enabling	Receiver Start Ready	Client	Streaming
Sink ASE	Enabling	Receiver Start Ready	Server	Streaming
All	Streaming	Update Metadata	Client or server	Streaming
Source ASE	Streaming	Disable	Client or server	Disabling

ASE Type	Current State	ASE Control Operation	Initiating Device	Next State
Sink ASE	Streaming	Disable	Client or server	QoS Configured
All	Streaming	Release	Client or server	Releasing
All	Streaming	Fast Enable ²	Client only	Enabling
Source ASE	Disabling	Receiver Stop Ready	Client only	QoS Configured
Source ASE	Disabling	Release	Client or server	Releasing
All	Releasing	Released (no caching)	Server only	Idle
All	Releasing	Released (caching)	Server only	Codec Configured

Table 3.2: ASE state machine transitions

¹ Note: This transition is only available if the ASCS server supports the Fast Enable feature (as defined in Section 5.10), as indicated by Bit 0 of the ASCS Features characteristic described in Section 4.3.1.

² Note: This transition is only available if the ASCS server supports the Fast Enable while Streaming feature (as defined in Section 5.10), as indicated by Bit 1 of the ASCS Features characteristic described in Section 4.3.1.

4 Service characteristics

This section defines the characteristic and descriptor requirements for ASCS.

Table 4.1 provides a summary of the characteristic support requirements for ASCS.

Requirements in this section are defined as “Mandatory” (M), “Optional” (O), “Excluded” (X), and “Conditional” (C.n). Conditional statements (C.n) are listed directly below the table in which they appear.

Characteristic Name	Requirement	Mandatory Properties	Optional Properties	Security Permissions
Sink ASE	C.1	Read, Notify	None	Encryption required
Source ASE	C.1	Read, Notify	None	Encryption required
ASE Control Point	M	Write, WriteWithoutResponse, Notify	None	Encryption required
ASCS Features	C.2	Read	Notify	Encryption required

Table 4.1: ASCS characteristics

C.1: At least one of the Sink ASE or Source ASE characteristics shall be supported.

C.2: Mandatory if the server supports any of the features defined in Section 4.3.1. Otherwise, optional.

At least one instance of the Sink ASE characteristic shall exist on the server if the Sink ASE characteristic is supported.

At least one instance of the Source ASE characteristic shall exist on the server if the Source ASE characteristic is supported.

A single instance of the ASE Control Point characteristic shall exist on the server.

A single instance of the ASCS Features characteristic shall exist on the server if the ASCS Features characteristic is supported.

4.1 Audio Stream Endpoints

An ASE characteristic exposes information about an ASE, including the state of the ASE state machine, codec parameters, QoS parameters, and mapping information for any underlying CIS configuration.

An ASE characteristic represents the state of an ASE, which can be coupled to a CIS to establish a unicast Audio Stream. For each ASE characteristic (distinguished by their attribute handles), the server shall expose separate ASE characteristic values for each client. A client reading or being notified of an ASE characteristic value cannot gain any information about the ASE characteristic value at the same attribute handle that is exposed for a different client.

Figure 4.1 shows an example of a server exposing three Sink ASEs using one Sink ASE characteristic for three clients (Client A, Client B, and Client C). The server is exposing three Sink ASEs using a single characteristic because the server exposes separate copies of the Sink ASE characteristic value for each client irrespective of whether the actual numerical values exposed for each client are identical.

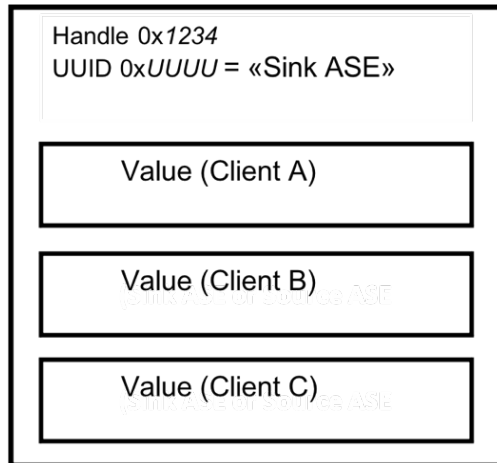


Figure 4.1: Example of a server exposing three Sink ASEs using one Sink ASE characteristic for three clients

In Figure 4.1, if Client A were to request the server to perform some behavior which leads to the value exposed by the server for Client A to change, the values exposed by the server for Client B and Client C would be unaffected, as shown in Figure 4.2.

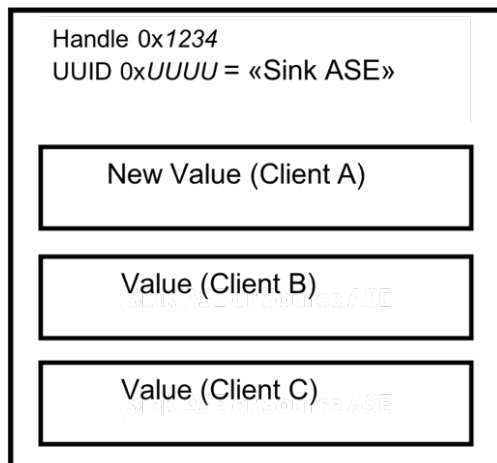


Figure 4.2: Example of a server exposing three Sink ASEs by using one Sink ASE characteristic for three clients

The server can expose a maximum of one Sink ASE per client per Sink ASE characteristic and one Source ASE per client per Source ASE characteristic, and the server should expose at a minimum the

number of Sink ASE characteristics and/or Source ASE characteristics that it needs to support the number of concurrent established unicast Audio Streams that it can support for a single client.

For example, a server that can support three concurrent established unicast Audio Streams with Client A, might expose three ASE characteristics to enable this; one Sink ASE characteristic for receiving voice audio, a Source ASE characteristic for transmitting voice audio, and a second Sink ASE characteristic for receiving music audio as shown in [Figure 4.3](#).

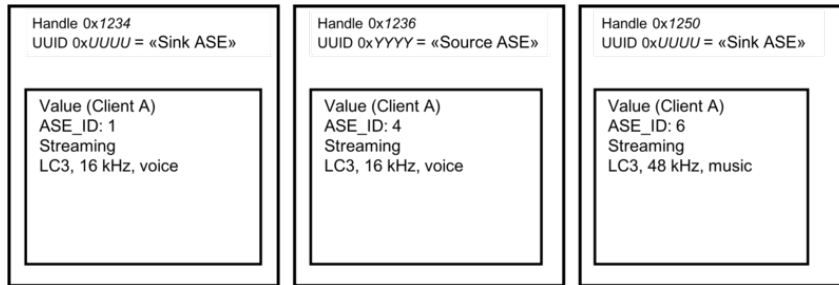


Figure 4.3: Example of a server exposing three ASEs for a single client using two Sink ASE characteristics and one Source ASE characteristic

If the server in [Figure 4.3](#) also interacts with Client B, Client B would also observe the server exposing three ASEs, giving a total of six ASEs exposed by the server as shown in [Figure 4.4](#). Each client is only aware of the ASEs exposed for that client.

In the example in [Figure 4.4](#), there are two separate ASEs being exposed—one for each client—in each ASE characteristic value. Each ASE_ID value for the Sink ASE characteristic at Handle 0x1234 is numerically identical (0x01) for both Client A and Client B. This is deliberately included in the example to illustrate that there are two separate Sink ASEs being exposed at Handle 0x1234, one for each client, which are independent of one another irrespective of whether the numerical values are the same. The server allocates ASE_ID values as it sees fit, subject to the constraints in [Figure 4.2](#).

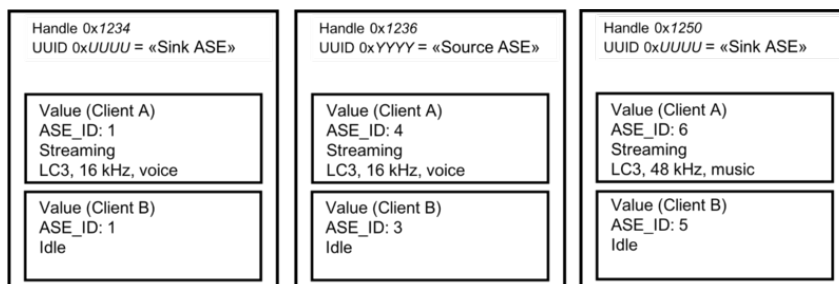


Figure 4.4: Example of a server exposing six ASEs for two clients using three ASE characteristics

The server should allocate local resources which can be affected by a change in the state of an ASE as it sees fit. The behavior of the server in deciding whether to accept client requests that can change the state of an ASE is left to the implementation unless otherwise defined by higher layers.

For example, the server in [Figure 4.4](#) might not allow any ASEs exposed for Client B to change from the Idle state because the server had three ASEs in the Streaming state with the Client A, or the server might decide to release an ASE exposed for Client A from the Streaming state in order to free resources that could be allocated for Client B.

The format of the ASE characteristic is defined in [Table 4.2](#).

Field	Size (Octets)	Description
ASE_ID	1	Identifier of this ASE, assigned by the server. A different ASE_ID namespace exists for each connected client. Each ASE_ID in a namespace shall be unique. Shall not change for a client if the server has a trusted relationship with that client. Shall not be assigned a value of 0x00 by the server.
ASE_State	1	State of the ASE with respect to the ASE state machine Value: 0x00–0x06 (see Table 3.1) All other values: RFU
Additional_ASE_Parameters	Varies	Dependent on states defined in Table 3.1 Idle state or Releasing state: Empty (zero length) States in Table 3.1 other than the Idle state or the Releasing state: see Table 4.3, Table 4.4, or Table 4.5 All other values: RFU

Table 4.2: ASE characteristic format

The format of the Additional_ASE_Parameters field when ASE_State = 0x01 (Codec Configured) is defined in [Table 4.3](#).

Field	Size (Octets)	Description
Framing	1	Server support for unframed ISOAL PDUs 0x00: Unframed ISOAL PDUs supported 0x01: Unframed ISOAL PDUs not supported All other values: RFU
Preferred_PHY	1	Server preferred value for the PHY parameter to be written by the client for this ASE in the Config QoS operation defined in Section 5.2 Formatted as a bitfield 0b00000001: LE 1M PHY preferred 0b00000010: LE 2M PHY preferred 0b00000100: LE Coded PHY preferred The server may set multiple bits in the Preferred_PHY bitfield

Field	Size (Octets)	Description
		The server shall not set a bit to 1 for an unsupported PHY in the Preferred_PHY bitfield A value of 0x00 denotes no preference All other bits: RFU
Preferred_Retransmission_Number	1	Server preferred value for the Retransmission_Number parameter to be written by the client for this ASE in the Config QoS operation defined in Section 5.2. The Retransmission_Number parameter is defined in Volume 4, Part E, Section 7.8.97 in [1]. If the server expresses a value for Preferred_Retransmission_Number that is not 0xFF, the server shall support all values of Retransmission_Number up to and including Preferred_Retransmission_Number. Range: 0x00–0xFF 0xFF = Don't care
Max_Transport_Latency	2	Maximum server supported value for the Max_Transport_Latency parameter to be written by the client for this ASE in the Config QoS operation defined in Section 5.2. The Max_Transport_Latency parameter is defined in Volume 4, Part E, Section 7.8.97 in [1]. Range: 0x0005–0x0FA0 Units: ms All other values: RFU
Presentation_Delay_Min	3	Minimum server supported Presentation_Delay for this ASE Units: μs
Presentation_Delay_Max	3	Maximum server supported Presentation_Delay for this ASE Units: μs
Preferred_Presentation_Delay_Min	3	Server preferred minimum Presentation_Delay for this ASE. The server can use this parameter and Preferred_Presentation_Delay_Max to express a narrower range of its supported presentation delay that the server prefers to operate in. If nonzero, shall be $\geq$ Presentation_Delay_Min A value of 0x000000 indicates no preference. Units: μs
Preferred_Presentation_Delay_Max	3	Server preferred maximum Presentation_Delay for this ASE. The server can use this parameter and Preferred_Presentation_Delay_Min to express a narrower range of

Field	Size (Octets)	Description
		its supported presentation delay that the server prefers to operate in. If nonzero, shall be $\leq$ Presentation_Delay_Max A value of 0x000000 indicates no preference. Units: μ s
Codec_ID	5	Octet 0: Coding_Format Coding_Format values are defined in Bluetooth Assigned Numbers [2]. Octet 1–2: Company_ID value Company_ID values are defined in Bluetooth Assigned Numbers [2]. Shall be 0x0000 if octet 0 is $\neq$ 0xFF Octet 3–4: Vendor-specific codec_ID value Shall be 0x0000 if octet 0 is $\neq$ 0xFF
Codec_Specific_Configuration_Length	1	Length of the Codec_Specific_Configuration field for this ASE
Codec_Specific_Configuration	Varies	Codec specific configuration for this ASE Shall exist only if the Codec_Specific_Configuration_Length field is $\neq$ 0x00

Table 4.3: Additional_ASE_Parameters format when ASE_State = 0x01 (Codec Configured)

The format of the Additional_ASE_Parameters field when ASE_State = 0x02 (QoS Configured) is defined in Table 4.4.

Field	Size (Octets)	Description
CIG_ID	1	CIG_ID parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2
CIS_ID	1	CIS_ID parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2
SDU_Interval	3	SDU_Interval parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2 Range: 0x0000FF–0x0FFFFFFF All other values: RFU

Field	Size (Octets)	Description
Framing	1	Framing parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2 0x00: Unframed 0x01: Framed All other values: RFU
PHY	1	PHY parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2 0b00000001: LE 1M PHY 0b00000010: LE 2M PHY 0b00000100: LE Coded PHY All other bits: RFU
Max_SDU	2	Max_SDU parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2 Range: 0x00–0xFFFF All other values: RFU
Retransmission_Number	1	Retransmission_Number parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2 Range: 0x00–0xFF All other values: RFU
Max_Transport_Latency	2	Max_Transport_Latency parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2 Range: 0x0005–0x0FA0 Units: ms All other values: RFU
Presentation_Delay	3	Presentation_Delay parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2 Units: μ s

Table 4.4: Additional_ASE_Parameters format when ASE_State = 0x02 (QoS Configured)

The format of the Additional_ASE_Parameters field when ASE_State = 0x03 (Enabling), 0x04 (Streaming), or 0x05 (Disabling) is defined in Table 4.5.

Field	Size (Octets)	Description
CIG_ID	1	CIG_ID parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2
CIS_ID	1	CIS_ID parameter value for this ASE written by the client in the Config QoS operation defined in Section 5.2
Metadata_Length	1	Length of the Metadata field for this ASE
Metadata	Varies	Length-type-value (LTV)-formatted Metadata for this ASE Shall exist only if the Metadata_Length parameter value for this ASE is not 0x00

Table 4.5: Format of the Additional_ASE_Parameters field when ASE_State = 0x03 (Enabling), 0x04 (Streaming), or 0x05 (Disabling)

4.1.1 ASE behavior

An ASE characteristic (Sink ASE or Source ASE) returns its characteristic value when read by a client. The characteristics can be configured for notifications by using the GATT Write Characteristic Descriptors sub-procedure on the Client Characteristic Configuration descriptor.

If the characteristic value exposed for a client changes when in a connection and the value of the Client Characteristic Configuration descriptor is configured for notifications, the server shall notify the new characteristic value to the client. Permitted behavioral exceptions to this requirement are defined in Section 5.3.

If the characteristic value for a bonded client changes when not in a connection and the value of the Client Characteristic Configuration descriptor is configured for notifications, the server shall notify the new characteristic value when reconnecting to the bonded client.

4.2 ASE Control Point

When written by a client, the ASE Control Point characteristic is an 8-bit enumerated value (known as the opcode) followed by zero or more parameter octets. The opcode is used by the server to determine which ASE Control operation is being initiated by the client. A notification of the ASE Control Point is used to provide a response to a client-initiated ASE Control operation.

ASE Control operations can be initiated by the server or by a client, as defined in Table 3.2.

ASE Control operations and any associated opcodes are defined in Table 4.6.

Opcode	Operation	Requirement	Parameter	Description
0x01	Config Codec	M	Section 5.1	Configures codec parameters for one or more ASEs. Valid only if ASE_State field = 0x00 (Idle), or 0x01 (Codec Configured), or 0x02 (QoS Configured).
0x02	Config QoS	M	Section 5.2	Configures preferred CIS parameters for one or more ASEs. Valid only if ASE_State field value = 0x01 (Codec Configured) or 0x02 (QoS Configured).
0x03	Enable	M	Section 5.3	Applies codec parameters and preferred CIS parameters, applies any Metadata, and starts coupling an ASE to a CIS for one or more ASEs. Valid only if ASE_State field value = 0x02 (QoS Configured).
0x04	Receiver Start Ready	M	Section 5.4	Signals that the Audio Sink is ready to receive audio data transmitted by the Audio Source, and completes coupling an ASE to a CIS. Valid only if ASE_State field value = 0x03 (Enabling).
0x05	Disable	M	Section 5.5	Starts decoupling a Source ASE from a CIS for one or more Source ASEs. Decouples a Sink ASE from a CIS for one or more Sink ASEs Valid only if ASE_State field value = 0x03 (Enabling) or 0x04 (Streaming).
0x06	Receiver Stop Ready	M	Section 5.6	Signals that the Audio Sink is ready to stop receiving audio data transmitted by the Audio Source, and completes decoupling a Source ASE from a CIS. Valid only for a Source ASE and only if ASE_State field value = 0x05 (Disabling).
0x07	Update Metadata	M	Section 5.7	Updates Metadata for one or more ASEs. Valid only if ASE_State field value = 0x03 (Enabling) or 0x04 (Streaming).

Opcode	Operation	Requirement	Parameter	Description
0x08	Release	M	Section 5.8	Releases resources associated with an ASE, immediately decouples the ASE from any previously coupled CIS, and tears down any CIS previously established for the ASE for one or more ASEs. Valid only if ASE_State field value = 0x01 (Codec Configured), 0x02 (QoS Configured), 0x03 (Enabling), 0x04 (Streaming), or 0x05 (Disabling).
–	Released	M	Section 5.9	Transitions an ASE from Releasing state to the Idle state or the Codec Configured state depending on the server preference for caching a codec configuration. Allowed only when ASE_State field = 0x06 (Releasing).
0x09	Fast Enable	C.1	Section 5.10	Sets up the codec parameters and QoS parameters for a CIS, applies metadata to an ASE, and initiates the coupling between the ASE and the CIS. A client may use the Fast Enable operation as a replacement for individual Config Codec, Config QoS, and Enable operations. Valid only if the ASE_State field value = 0x00 (Idle), 0x01 (Codec Configured), or 0x02 (QoS Configured), or if the ASE State field value = 0x04 (Streaming) and “Fast Enable while Streaming” is supported.
All other values	RFU	–	–	–

Table 4.6: ASE Control operations

C.1: Mandatory if the ASCS server supports the Fast Enable operation feature, otherwise Excluded.

The format of the ASE Control Point characteristic value when notified is defined in Table 4.7.

Field	Size (Octets)	Description
Opcode	1	Opcode of the client-initiated ASE Control operation causing this response
Number_of_ASEs	1	Total number of ASEs the server is providing a response for If the Response_Code value is 0x01 or 0x02, Number_of_ASEs shall be set to 0xFF.

Field	Size (Octets)	Description
ASE_ID[i]	1	ASE_ID for this ASE If the Response_Code value is 0x01 or 0x02, ASE_ID shall be set to 0x00, and [i] shall be set to 0.
Response_Code[i]	1	Shall be set to 0x00 if the server successfully completes a client-initiated ASE Control operation, otherwise shall be set as defined in Table 5.1 . If the Response_Code value is 0x01 or 0x02, [i] shall be set to 0.
Reason[i]	1	Shall be set to 0x00 if the server successfully completes a client-initiated ASE Control operation, otherwise shall be set as defined in Table 5.1 . If the Response_Code value is 0x01 or 0x02, [i] shall be set to 0.

Table 4.7: Format of ASE Control Point characteristic value when notified

4.2.1 ASE Control Point behavior

The ASE Control Point characteristic can be written by a client.

The ASE Control Point characteristic can be configured for notifications by a client by using the GATT Write Characteristic Descriptors sub-procedure on the Client Characteristic Configuration descriptor.

4.3 ASCS Features

The ASCS Features characteristic exposes information about the features supported by the ASCS server. This allows clients to discover capabilities related to ASE management.

The format of the ASCS Features characteristic is defined in [Table 4.8](#). The characteristic value is a bitmask, with individual bits indicating support for ASCS features.

Field	Size (Octets)	Description
Features	Variable, at least 1	Bitmask of supported ASCS features.

Table 4.8: ASCS Features characteristic format

4.3.1 ASCS Features behavior

The ASCS Features characteristic returns its associated value when read by a client using the GATT Read Characteristic Value sub-procedure or the GATT Read Using Characteristic UUID sub-procedure.

If the characteristic value exposed for a client changes when in a connection, and the Client Characteristic Configuration descriptor is configured for notifications, then the server shall notify the new characteristic value to the client.

The bit field values for the ASCS Features characteristic are defined in [Table 4.9](#).

Bit Location	Description	0 value (Default)	1 value (Supported)
Bit 0	Fast Enable Support	Not supported	Supported
Bit 1	Fast Enable while Streaming Support	Not supported	Supported
All other bits	RFU	0	-

Table 4.9: Bit location definitions for the ASCS Features characteristic

If the server supports the Fast Enable operation (as defined in [Section 5.10](#)) as an ASE Control operation, Bit 0 shall be set to 0b1. Otherwise, Bit 0 shall be set to 0b0.

If the server supports the Fast Enable operation on an ASE that is in the Streaming state (0x04) (see [Table 3.2](#)), Bit 1 shall be set to 0b1. Otherwise, Bit 1 shall be set to 0b0.

If the server indicates support for Fast Enable while Streaming, then the server shall support the Fast Enable operation.

5 ASE Control operations

This section defines a server's behavior when performing ASE Control operations.

If the server successfully completes a client-initiated ASE Control operation for an ASE, the server shall send a notification of the ASE Control Point characteristic value formatted as defined in [Table 4.7](#). The server shall then perform the behavior defined in [Section 5.1](#) through [Section 5.10](#) for that ASE Control operation and send notifications of any ASE characteristic values written during that ASE Control operation.

If the server rejects or cannot successfully complete a client-initiated ASE Control operation for an ASE, the server shall send a notification of the ASE Control Point characteristic value formatted as defined in [Table 4.7](#).

If the server autonomously initiates an ASE Control operation for an ASE, the server shall perform the behavior as defined in [Section 5.1](#) through [Section 5.9](#) for that ASE Control operation and send notifications of any ASE characteristic values written during that ASE Control operation.

The server shall not send a notification of the ASE Control Point characteristic value when completing an autonomously-initiated ASE Control operation.

A client-initiated ASE Control operation shall be defined as an invalid length operation if the Number_of_ASEs parameter value is less than 1, or if the Number_of_ASEs parameter value does not match the number of parameter arrays written by the client. A client-initiated ASE Control operation shall also be defined as an invalid length operation if the total length of all parameters written by the client is not equal to the total length of all fixed parameters plus the length of any variable length parameters for that operation as defined in [Section 5.1](#) through [Section 5.8](#).

[Table 5.1](#) defines the Response_Code and Reason values that shall be used when the server rejects or cannot successfully complete a client-initiated ASE Control operation.

The server can choose to provide additional context to a client initiating an ASE Control operation by using a Response_Code value of 0x07 (Unsupported Configuration Parameter Value), 0x08 (Rejected Configuration Parameter Value), or 0x09 (Invalid Configuration Parameter Value).

When sending a Response_Code value of 0x07 (Unsupported Configuration Parameter Value), 0x08 (Rejected Configuration Parameter Value), or 0x09 (Invalid Configuration Parameter Value), if multiple Response_Code and Reason values are applicable to ASE Control operation parameter values written by a client, the server shall use the Response_Code and Reason values that apply to the error caused by the first parameter value in the array of parameter values written by the client for that ASE.

For example, if a client initiated an ASE Control operation with parameter value[0], parameter value[1], and parameter value[2], and if parameter value[1] and parameter value[2] were in error, then the server would use the Response_Code and Reason values applicable to parameter value[1].

If the client thereafter initiated a new ASE Control operation with the same opcode and with only parameter value[2] in error, the server would use the Response_Code and Reason values applicable to parameter value[2].

If the client instead initiated a new ASE Control operation with the same opcode and with parameter value[2] no longer in error, but a new error was detected in parameter value[0], and with the original error detected in parameter value[1] still present, the server would use the Response_Code and Reason values applicable to parameter value[0].

Response_Code	Reason	Description
0x00 = Success	0x00	The server has successfully completed the client-initiated ASE Control operation.
0x01 = Unsupported Opcode	0x00	The server does not support the client-initiated ASE Control operation defined by the opcode written by the client.
0x02 = Invalid Length	0x00	The server has detected an invalid length operation written by the client.
0x03 = Invalid ASE_ID	0x00	The server has detected that an ASE_ID written by the client does not match an ASE_ID in an exposed ASE characteristic value for that client.
0x04 = Invalid ASE State Machine Transition	0x00	The server has detected that the client-initiated ASE Control operation would cause an invalid ASE state machine transition.
0x05 = Invalid ASE direction	0x00	The server has detected that the client-initiated ASE Control operation is not valid for the ASE direction.
0x06 = Unsupported Audio Capabilities	0x00	The server has detected that the audio capabilities requested during a Config Codec operation are not supported (i.e., the server has not exposed the requested configuration in any PAC record as defined in [4]).
0x07 = Unsupported Configuration Parameter Value	0x01 = Codec_ID 0x02 = Codec_Specific_Configuration 0x03 = SDU_Interval 0x04 = Framing	The server has detected that it does not support one or more configuration parameter values written by the client. Shall not be used when the Reason value is 0x04(Framing).
0x08 = Rejected Configuration Parameter Value	0x05 = PHY 0x06 = Maximum_SDU_Size	The server has rejected one or more configuration parameter values written by the client.
0x09 = Invalid Configuration Parameter Value	0x07 = Retransmission_Number 0x08 = Max_Transport_Latency 0x09 = Presentation_Delay	The server has detected one or more invalid configuration parameter values written by the client.

Response_Code	Reason	Description
	0x0A = Invalid_ASE_CIS_Mapping 0x0B = HDT_Rates All other values: RFU	
0x0A = Unsupported Metadata	0xXX = Value of the Metadata Type field in error	The server has detected an unsupported Metadata Type written by the client.
0x0B = Rejected Metadata	0xXX = Value of the Metadata Type field in error	The server has rejected a Metadata Type written by the client.
0x0C = Invalid Metadata	0xXX = Value of the Metadata Type field in error	This Response_Code is used to inform the client that the Metadata Value is incorrectly formatted.
0x0D = Insufficient Resources	0x00	The server is unable to successfully complete the client-initiated ASE Control operation because of insufficient resources.
0x0E = Unspecified Error	0x00	The server has encountered an unspecified error.
All other values	RFU	–

Table 5.1: ASE Control Point characteristic Response_Code and Reason values when notified

5.1 Config Codec operation

When written by a client, the Config Codec operation is used to request a codec configuration with the server.

Successful completion of the Config Codec operation on the server results in the server exposing its preferred QoS parameters.

The Config Codec operation may be autonomously initiated by the server.

As defined in Table 4.6, the Config Codec operation for an ASE is valid only if the value of the ASE_State field is 0x00 (Idle), 0x01 (Codec Configured), or 0x02 (QoS Configured).

The Config Codec operation uses the format defined in Table 5.2.

Opcode	Size (Octets)	Description
0x01	1	0x01 = Config Codec
Parameters	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASEs used in the Config Codec operation Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE
Target_Latency[i]	1	Provides context for the server to return meaningful values for QoS preferences in Codec Configured state 0x01 = Target low latency 0x02 = Target balanced latency and reliability 0x03 = Target high reliability
Target_PHY[i]	1	PHY parameter target to achieve the Target_Latency value 0x01: LE 1M PHY 0x02: LE 2M PHY 0x03: LE Coded PHY
Codec_ID[i]	5	Octet 0: Coding_Format Coding_Format values are defined in Bluetooth Assigned Numbers [2]. Octet 1–2: Company_ID value Company_ID values are defined in Bluetooth Assigned Numbers [2]. Shall be 0x0000 if octet 0 is $\neq$ 0xFF Octet 3–4: Vendor-specific codec_ID value Shall be 0x0000 if octet 0 is $\neq$ 0xFF
Codec_Specific_Configuration_Length[i]	1	Length of the Codec_Specific_Configuration value for this ASE
Codec_Specific_Configuration[i]	Varies	Codec-Specific Configuration for this ASE Shall exist only if the Codec_Specific_Configuration_Length parameter value is $\neq$ 0x00

Table 5.2: Config Codec operation format

If the server accepts the requested Config Codec operation parameter values for an ASE, or if the server autonomously initiates the Config Codec operation for an ASE, the server shall:

- Transition the ASE to the Codec Configured state and write a value of 0x01 (Codec Configured) to the ASE_State field.
- Write the accepted or autonomously-initiated Config Codec operation parameter values to the matching Additional_ASE_Parameters fields defined in [Table 4.3](#).
- Write the server's preferred values for the remaining Additional_ASE_Parameters fields defined in [Table 4.3](#).

5.2 Config QoS operation

The Config QoS operation is used to request a CIS configuration preference with the server and to assign identifiers to the CIS.

As defined in [Table 4.6](#), the Config QoS operation for an ASE is valid only if the value of the ASE_State field is 0x01 (Codec Configured) or 0x02 (QoS Configured).

The Config QoS operation uses the format defined in [Table 5.3](#).

Opcode	Size (Octets)	Description
0x02	1	0x02 = Config QoS
Parameter	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASEs used in the Config QoS operation Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE
CIG_ID[i]	1	CIG_ID parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1])
CIS_ID[i]	1	CIS_ID parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1])
SDU_Interval[i]	3	SDU_Interval parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1]) Range: 0x0000FF–0x0FFFFFFF All other values: RFU
Framing[i]	1	Framing parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1]) 0x00: Unframed

		0x01: Framed All other values: RFU
PHY[i]	1	PHY parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1]) 0b00000001 : LE 1M PHY 0b00000010: LE 2M PHY 0b00000100: LE Coded PHY All other bits: RFU
Max_SDU[i]	2	Max_SDU parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1]) Range: 0x00–0x0FFF All other values: RFU
Retransmission_Number[i]	1	Retransmission_Number parameter written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1]) Range: 0x00–0xFF
Max_Transport_Latency[i]	2	Max_Transport_Latency parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part, E, Section 7.8.97 in [1]) Range: 0x0005–0x0FA0 All other values: RFU
Presentation_Delay[i]	3	Presentation delay parameter value being requested by the client for this ASE Units: μ s

Table 5.3: Config QoS operation format

If a client requests a Config QoS operation for an ASE that would result in more than one Sink ASE having identical CIG_ID and CIS_ID parameter values for that client, or that would result in more than one Source ASE having identical CIG_ID and CIS_ID parameter values for that client, the server shall not accept the Config QoS operation for that ASE. The server shall send a notification of the ASE Control Point characteristic to the client, the server shall set the Response_Code value for that ASE to 0x09 (Invalid Parameter Value), and the server shall set the Reason value for that ASE to 0x0A (Invalid_ASE_CIS_Mapping).

If the server accepts the requested Config QoS operation parameter values for an ASE the server shall:

- Transition the ASE to the QoS Configured state and write a value of 0x02 (QoS Configured) to the ASE_State field.
- Write the accepted Config QoS operation parameter values to the matching Additional_ASE_Parameters fields defined in [Table 4.4](#).

5.3 Enable operation

The Enable operation is used to request the server to enable an ASE and to provide any Metadata applicable for that ASE.

As defined in [Table 4.6](#), the Enable operation is valid for an ASE only if the value of the ASE_State field is 0x02 (QoS Configured).

The Enable operation uses the format defined in [Table 5.4](#).

Opcode	Size (Octets)	Description
0x03	1	0x03 = Enable
Parameter	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASE_IDs used in the Enable operation Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE
Metadata_Length[i]	1	Length of the Metadata parameter for this ASE
Metadata[i]	Varies	LTV-formatted Metadata for this ASE. Shall exist only if the Metadata_Length parameter value is not 0x00

Table 5.4: Enable operation format

If the server accepts the requested Enable operation parameter values for an ASE, the server shall:

- Transition the ASE to the Enabling state and write a value of 0x03 (Enabling) to the ASE_State field.
 - If a CIS has been established and the server is acting as Audio Sink for the ASE, and if the server is ready to receive audio data transmitted by the client, the server may autonomously initiate the Receiver Start Ready, as defined in [Section 5.4](#), without sending a notification of the ASE characteristic value in the Enabling state.
- Write the accepted Enable operation parameter values to the matching Additional_ASE_Parameters fields defined in [Table 4.5](#)

5.4 Receiver Start Ready operation

When written by a client acting as Audio Sink, the Receiver Start Ready operation informs a server acting as Audio Source that the client is ready to consume audio data transmitted by the server.

As defined in [Table 4.6](#), the Receiver Start Ready operation is valid for an ASE only if the value of the ASE_State field is 0x03 (Enabling) and if the device initiating the Receiver Start Ready operation is acting as Audio Sink for that ASE.

The server, when acting as Audio Sink, shall initiate the Receiver Start Ready operation autonomously to inform a client acting as Audio Source that the server is ready to consume audio data transmitted by the client.

The Receive Start Ready operation uses the format defined in [Table 5.5](#).

Opcode	Size (Octets)	Description
0x04	1	0x04 = Receiver Start Ready
Parameter	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASE_IDs used in the Receiver Start Ready operation Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE

Table 5.5: Receiver Start Ready operation format

If the ASE_ID written by the client represents a Sink ASE, the server shall not accept the Receiver Start Ready operation for that ASE and the server shall send a notification of the ASE Control Point characteristic to the client, and the server shall set the Response_Code value for that ASE to 0x05 (Invalid ASE direction).

If the server accepts the requested Receiver Start Ready operation parameter values for an ASE, or if the server autonomously initiates the Receiver Start Ready operation for an ASE, the server shall transition the ASE to the Streaming state and write a value of 0x04 (Streaming) to the ASE_State field.

5.5 Disable operation

When written by a client, the Disable operation is used to request the server to disable an ASE.

As defined in [Table 4.6](#), the Disable operation is valid for an ASE only if the value of the ASE_State field is 0x03 (Enabling) or 0x04 (Streaming).

The server may initiate the Disable operation autonomously.

The Disable operation uses the format defined in [Table 5.6](#).

Opcode	Size (Octets)	Description
0x05	1	0x05 = Disable
Parameter	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASE_IDs used in the Disable operation Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE

Table 5.6: Disable operation parameters

If the server accepts the requested Disable operation parameter values for a Source ASE, or if the server autonomously initiates the Disable operation for a Source ASE, the server shall:

- Transition the ASE to the Disabling state and write a value of 0x05 (Disabling) to the ASE_State field.
- Write the accepted or autonomously-initiated Disable operation parameter values to the matching Additional_ASE_Parameters fields defined in [Table 4.5](#).

If the server accepts the requested Disable operation parameter values for a Sink ASE, or if the server autonomously initiates the Disable operation for a Sink ASE, the server shall:

- Transition the ASE to the QoS Configured state and write a value of 0x02 (QoS Configured) to the ASE_State field.
- Write the previously accepted Config QoS operation parameter values to the matching Additional_ASE_Parameters fields defined in [Table 4.4](#).

5.6 Receiver Stop Ready operation

When written by a client acting as Audio Sink, the Receiver Stop Ready operation is used to inform a server acting as Audio Source that the client is ready to stop consuming audio data transmitted by the server.

As defined in [Table 4.6](#), the Receiver Stop Ready operation is valid only for a Source ASE and only if the value of the ASE_State field is 0x04 (Disabling).

The Receiver Stop Ready operation uses the format defined in [Table 5.7](#).

Opcode	Size (Octets)	Description
0x06	1	0x06 = Receiver Stop Ready
Parameter	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASE_IDs used in the Receiver Stop Ready operation Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE

Table 5.7: Receiver Stop Ready operation format

If the ASE_ID written by the client represents a Sink ASE, the server shall not accept the Receiver Stop Ready operation for that ASE and the server shall send a notification of the ASE Control Point characteristic to the client, and the server shall set the Response_Code value for that ASE to 0x05 (Invalid ASE direction).

If the server accepts the requested Receiver Stop Ready operation parameter values for a Source ASE, the server shall transition the ASE to the QoS Configured state and write a value of 0x02 (QoS Configured) to the ASE_State field, and the server shall write the previously accepted Config QoS operation parameter values to the matching Additional_ASE_Parameters fields defined in [Table 4.5](#).

5.7 Update Metadata operation

When written by a client, the Update Metadata operation is used to provide the server with Metadata to be applied to an ASE.

As defined in [Table 4.6](#), the Update Metadata operation is valid for an ASE only if the value of the ASE_State field is 0x03 (Enabling) or 0x04 (Streaming).

The server may initiate the Update Metadata operation autonomously.

The Update Metadata operation uses the format defined in [Table 5.8](#).

Opcode	Size (Octets)	Description
0x07	1	0x07 = Update Metadata
Parameter	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASE_IDs used in the Update Metadata operation Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE

Metadata_Length[i]	1	Length of the Metadata parameter for this ASE
Metadata[i]	Varies	LTV-formatted Metadata for this ASE Shall exist only if the Metadata_Length parameter value is not 0x00

Table 5.8: Update Metadata operation format

If the server accepts the requested Update Metadata operation parameter values for an ASE, or if the server initiates Update Metadata operation autonomously, the server shall write the accepted or autonomously-initiated Update Metadata operation parameter values to the matching Additional_ASE_Parameters fields defined in [Table 4.5](#).

5.8 Release operation

When written by a client, the Release operation is used to request the server to release an ASE and all resources associated with that ASE.

As defined in [Table 4.6](#), the Release operation is valid for an ASE only if the value of the ASE_State field is 0x01 (Codec Configured), 0x02 (QoS Configured), 0x03 (Enabling), 0x04 (Streaming), or 0x05 (Disabling).

The server may initiate the Release operation autonomously.

The Release operation uses the format defined in [Table 5.9](#).

Opcode	Size (Octets)	Description
0x08	1	0x08 = Release
Parameter	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASE_IDs to be released Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE

Table 5.9: Release operation format

If the server accepts the requested Release operation parameter values for an ASE, or the server autonomously initiates the Release operation for an ASE, the server shall transition the ASE to the Releasing state and write a value of 0x06 (Releasing) to the ASE_State field.

5.9 Released operation

The Released operation shall be initiated autonomously by the server if:

- The server has detected the loss of the LE-ACL for an ASE in any state, or

- The Release operation for an ASE has been completed and the server controller has indicated that the underlying CIS for the ASE has been torn down.

When initiating the Released operation, the server shall follow the steps in one of the following lists.

If the server wants to cache a codec configuration:

- Transition the ASE to the Codec Configured state and write a value of 0x01 (Codec Configured) to the ASE_State field.
- Write the configured values or the server's preferred values for the Codec_ID, Codec_Specific_Configuration_Length, and Codec_Specific_Configuration parameters to the matching Additional_ASE_Parameters fields defined in [Table 4.3](#).
- Write the server's preferred values for the remaining Additional_ASE_Parameters fields defined in [Table 4.3](#).

If the server does not want to cache a codec configuration:

- Transition the ASE to the Idle state and write a value of 0x00 (Idle) to the ASE_State field.
- Delete any Additional_ASE_Parameters fields present.

5.10 Fast Enable operation

The Fast Enable operation is initiated by the client and combines the functionalities of the Config Codec operation (Section 5.1), the Config QoS operation (Section 5.2), and the Enable operation (Section 5.3) into a single atomic operation. If the ASE is already in the Codec Configured state, the QoS Configured state, or the Streaming state, then the Fast Enable operation shall replace existing codec and QoS configurations on the ASE.

The Fast Enable operation uses the format defined in [Table 5.10](#).

Opcode	Size (Octets)	Description
0x09	1	Fast Enable
Parameter	Size (Octets)	Description
Number_of_ASEs	1	Total number of ASEs used in the Fast Enable operation Shall be ≥ 1
ASE_ID[i]	1	ASE_ID for this ASE
Codec_ID[i]	5	Octet 0: Coding_Format Coding_Format values are defined in Bluetooth Assigned Numbers [2]. Octet 1–2: Company_ID value

		Company_ID values are defined in Bluetooth Assigned Numbers [2]. Shall be 0x0000 if octet 0 is ≠ 0xFF Octet 3–4: Vendor-specific codec_ID value Shall be 0x0000 if octet 0 is ≠ 0xFF
CIG_ID[i]	1	CIG_ID parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6])
CIS_ID[i]	1	CIS_ID parameter value written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6])
Config_ID[i]	1	Config_ID: A unique identifier provided by the client that maps the configuration parameters in this command to a specific configuration within the CIG. The Config_ID value corresponds to the Config_ID established through the LE Set CIG Parameters command (see Volume 4, Part E, Section 7.8.97 in [6]) or the LE Add CIG Configuration command (see Volume 4, Part E, Section 7.8.X + 2 in [6]) for this ASE. 0x00: When configuration corresponds to the CIG configuration set by the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [6] 0x01-0x7F: Corresponding value used in the LE Add CIG Configuration command defined in Volume 4, Part E, Section 7.8.X + 2 in [6] All other values: RFU [1]
Codec_Specific_Configuration_Length[i]	1	Length of the Codec_Specific_Configuration value for this ASE
Codec_Specific_Configuration[i]	Varies	Codec-Specific Configuration for this ASE Shall exist only if the Codec_Specific_Configuration_Length parameter value is ≠ 0x00
SDU_Interval[i]	3	SDU_Interval parameter value (corresponding to Config_ID[i]) written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6] or the LE Add CIG Configuration command defined in Volume 4, Part E, Section 7.8.X + 2 in [6]) Range: 0x0000FF–0x0FFFFFFF All other values: RFU
Framing[i]	1	Framing parameter value (corresponding to Config_ID[i]) written by the client for this ASE (if HCI is used, written by using the LE Set

		CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6] or the LE Add CIG Configuration command defined in Volume 4, Part E, Section 7.8.X + 2 in [6] 0x00: Unframed 0x01: Framed All other values: RFU
PHY[i]	1	PHY parameter value (corresponding to Config_ID[i]) written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6] or the LE Add CIG Configuration command defined in Volume 4, Part E, Section 7.8.X + 2 in [6]) 0b00000001: LE 1M PHY 0b00000010: LE 2M PHY 0b00000100: LE Coded PHY 0b00010000: LE HDT PHY All other bits: RFU
Coded_Rates[i]	1	Coded_Rates parameter value (corresponding to Config_ID[i]) written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6] or the LE Add CIG Configuration command defined in Volume 4, Part E, Section 7.8.X + 2 in [6]) 0b01: S=8 coding 0b10: S=2 coding All other bits: RFU
HDT_Rates[i]	2	HDT Rates parameter value (corresponding to Config_ID[i]) written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6] or the LE Add CIG Configuration command defined in Volume 4, Part E, Section 7.8.X + 2 in [6]) 0b00000001: HDT2 0b00000010: HDT3 0b00000100: HDT4 0b00001000: HDT6 0b00010000: HDT7.5 All other bits: RFU
Max_SDU[i]	2	Max_SDU parameter value (corresponding to Config_ID[i]) written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6] or the LE Add CIG Configuration command defined in Volume 4, Part E, Section 7.8.X + 2 in [6])

		Range: 0x0000–0x0FFF All other values: RFU
Retransmission_Number[i]	1	Retransmission_Number parameter value (corresponding to Config_ID[i]) written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6] or the LE Add CIG Configuration command defined in Volume 4 in [6]) Range: 0x00–0xFF
Max_Transport_Latency[i]	2	Max_Transport_Latency parameter value (corresponding to Config_ID[i]) written by the client for this ASE (if HCI is used, written by using the LE Set CIG Parameters command defined in Volume 4, Part E, Section 7.8.97 in [1][6] or the LE Add CIG Configuration command defined in Volume 4, Part E, Section 7.8.X + 2 in [6]) Range: 0x0005–0x0FA0 All other values: RFU
Presentation_Delay[i]	3	Presentation delay parameter value being requested by the client for this ASE Units: μ s
Metadata_Length[i]	1	Length of the Metadata parameter for this ASE
Metadata[i]	Varies	LTV-formatted Metadata for this ASE Shall exist only if the Metadata_Length parameter value is not 0x00

Table 5.10: Fast Enable operation format

If the server accepts the requested Fast Enable operation parameter values for an ASE while that ASE is in the Idle, Codec Configured, or QoS Configured state, then the server shall:

- Transition the ASE to the Enabling state and write a value of 0x03 (Enabling) to the ASE_State field.
 - If a CIS has been established and the server is acting as Audio Sink for the ASE, and if the server is ready to receive audio data transmitted by the client, then the server may autonomously initiate the Receiver Start Ready operation, as defined in Section 5.4, without sending a notification of the ASE characteristic value in the Enabling state.
- Write the accepted Enable operation parameter values to the matching Additional_ASE_Parameters fields defined in Table 4.5.

If the server accepts the requested Fast Enable operation parameter values for an ASE while that ASE is in the Streaming state, then the server shall:

- Transition the ASE to the Enabling state and write a value of 0x03 (Enabling) to the ASE_State field. If the server is ready to receive audio data transmitted by the client during the CIS configuration update, then the server may autonomously initiate the Receiver Start Ready

operation, as defined in Section 5.4, without sending a notification of the ASE characteristic value in the Enabling state.

- Write the accepted Fast Enable operation parameter values to the matching Additional_ASE_Parameters fields defined in Table 4.5.
- Update existing Metadata with the new Metadata provided.

6 SDP interoperability

When ASCS is supported over Basic Rate/Enhanced Data Rate (BR/EDR), the attributes defined in [Table 6.1](#) shall be included in the Service Discovery Protocol (SDP) service record.

Item	Definition	Type	Value	Requirement
Service Class ID List	–	–	–	M
Service Class #0	–	UUID	«Audio Stream Control»	M
Protocol Descriptor List	–	Data Element Sequence	–	M
Protocol #0	–	UUID	«L2CAP»	M
Parameter #0 for Protocol #0	Protocol/Service Multiplexer (PSM)	uint16	PSM = ATT	M
Protocol #1	–	UUID	«ATT»	M
Additional Protocol Descriptor List	–	Data Element Sequence	–	C.1
Protocol Descriptor List	–	Data Element Sequence	–	C.1
Protocol #0	–	UUID	«L2CAP»	C.1
Parameter #0 for Protocol #0	PSM	uint16	PSM = EATT	C.1
Protocol #1	–	UUID	«ATT»	C.1
BrowseGroupList	–	–	PublicBrowseRoot Other browse UUIDs may also be included in the list.	M

Table 6.1: SDP Record

C.1: Mandatory to support if EATT is supported, otherwise Excluded.

7 Acronyms and abbreviations

Acronym/Abbreviation	Meaning
ACL	Asynchronous connection-oriented link
ASCS	Audio Stream Control Service
ASE	Audio Stream Endpoint
ATT	Attribute Protocol
BAP	Basic Audio Profile
BR/EDR	Basic Rate/Enhanced Data Rate
CIG	Connected Isochronous Group
CIS	Connected Isochronous Stream
EATT	Enhanced ATT
GAP	Generic Access Profile
GATT	Generic Attribute Profile
HCI	Host Controller Interface
LE	Low Energy
L2CAP	Logical Link Control and Adaptation Protocol
LSO	least significant octet
PACS	Published Audio Capabilities Service
PDU	Protocol Data Unit
PSM	Protocol/Service Multiplexer
QoS	Quality of Service
RFU	Reserved for Future Use
SDP	Service Discovery Protocol
SDU	Service Data Unit
UUID	universally unique identifier

Table 7.1: Acronyms and abbreviations

8 References

- [1] Bluetooth Core Specification (amended), Version 5.2 or later
- [2] Bluetooth SIG Assigned Numbers, <https://www.bluetooth.com/specifications/assigned-numbers>
- [3] Basic Audio Profile Specification, Version 1.0.1 or later
- [4] Published Audio Capabilities Service Specification, Version 1.0.1 or later
- [5] Bluetooth Core Specification Supplement, Version 9 or later
- [6] Bluetooth Core Specification, Version TBD or later